


904 ENCLOSURE WITH BEZEL - FLUSH MOUNT

"A" holes .250 (4) Two each side used for mounting.

ASSEMBLY:

1. Cut opening to fit phone box 6-5/8" x 8-5/8"
2. For WOOD Mounting, use (4) 3/16" x 5/8" long Lag Screws with washers.
3. For CONCRETE, BRICK, MASONRY, use Plastic Flanged inserts for 3/16" screws with washers.

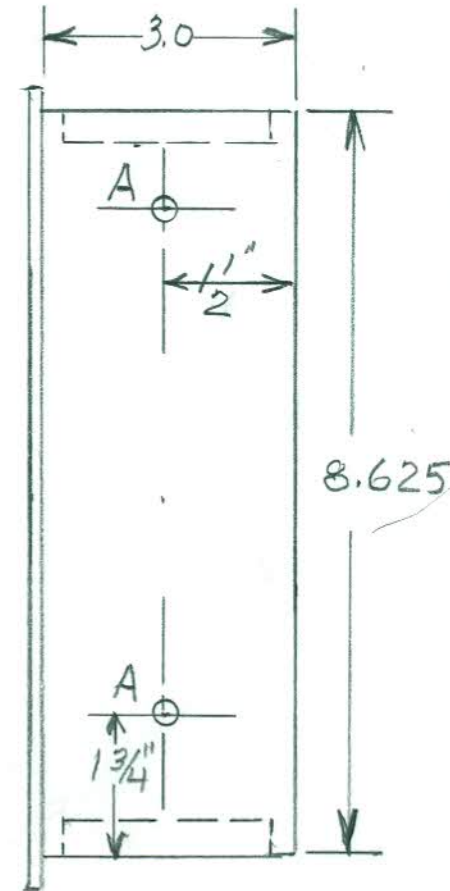

11/15/09 JST